

# INSTRUCTION MANUAL

**ATTENTION**  
Do not use the gun before  
reading this guide

## MODELS

ZİGANA K

ZİGANA T

ZİGANA F

ZİGANA C45

## DOUBLE ACTION PISTOLS



## **INTRODUCTION:**

TİSAS Trabzon Gun Industry Corp. is one of the leading pistol manufacturer in Turkey. Our company manufactures pistol confirming the AQAP 120 and ISO 9001-2000 regulations.

This manual will guides you in using safely, assembling/disassembling and cleaning and maintaining the pistol.

Please refer to TİSAS for further questions

# **TİSAŞ**

## **WARNING:**

TİSAS Trabzon Gun Industry Corp. is not responsible of the disobeying the usage regulations, the careless usage, the modification of the parts and/or internal safeties without permission, causing a damage because of non-standard, defective, inappropriate ammunition, the physical deformation caused by wrong usage and maintenance of the owner. TİSAS is also not responsible of the acts, that are not directly related to TİSAS, of the owner, like physical injury, damaging personal and property right and the similar situations.

## SAFETY RULES

- ⚠️ Weapon is not dangerous. The cause of the danger is ignorance and carelessness. For protection against the accidents, please obey the rules below.
- ⚠️ Accidents are always the result of disobeying main rules of gun safety.
- ⚠️ Those who use the gun are responsible for the accidents that may occur.
- ⚠️ Always treat firearms as if they are loaded. For the safety of the gun, the safety pin must be on the position "Safety". Release the magazine and take out the cartridge in the barrel as pulling the cover back.
- ⚠️ Never allow the muzzle to point anything that you are not willing to see destroyed.
- ⚠️ Learn the safety mechanisms and unloading the gun safely.
- ⚠️ Always keep your finger off the trigger until ready to shoot.
- ⚠️ Aim the gun to a safe direction when reloading and unloading it.
- ⚠️ Always keep the gun unloaded until ready to use.
- ⚠️ Use only the proper ammunition.
- ⚠️ Do not shoot at hard surfaces and water.
- ⚠️ Never use alcohol or over-the-counter, prescription or other drugs before or while shooting.
- ⚠️ Wear eye and ear protection as appropriate.
- ⚠️ Be sure that you are using a clean gun, regularly upkeep your gun.
- ⚠️ Always secure your firearm so that they are not accessible to children, other unauthorized and untrained persons.
- ⚠️ Although you are sure that your gun is empty, point the muzzle away from alive objects and non-targets.



## SECTION 1     LOADING THE PISTOL

### RELEASING THE MAGAZINE

Hold the pistol with your right hand, to remove the magazine press the magazine release button with your thumb. (Pic-1)



Picture: 1

### LOADING THE MAGAZINE

Hold the magazine with your left hand and with the other one insert the cartridges one at a time, pressing them down to the rear, continue inserting 15 cartridges. Insert the magazine into the pistol until its held by the magazine catch. (Pic-2)



Picture: 2

**ATTENTION:** Always make sure that the muzzle is pointed in a safe direction while loading and unloading!

## SETTING THE MAGAZINE

Hold the pistol with your hand, keeping away your finger from the trigger. Insert the magazine into the pistol until it is held by the magazine catch and it clicks. (Pic-3)



Picture: 3

## COCKING THE PISTOL

Hold the pistol with your right hand, pull back the slide to the end point with your left hand and release it. When the slide takes the first position with the help of the recoil spring. The slide will take a cartridge from the magazine. The pistol is cocked and ready to fire. (Pic-4)



Picture: 4

## SECTION 2 SHOOTING

**ATTENTION:** You're carrying a pistol loaded and ready to fire. Keep your finger off the trigger until you are actually aiming at the target ready to shoot.

If you're new in using a firearm, you should seek a supervised instruction by an instructor in a shooting range.

1- After wearing eye and ear protection, turn to the target with your loaded pistol.


2- Keep your feet 30-45cm apart to take a correct stance.

3- Raise your arm (see pic-5) and line up with the target. Aim the gun and pull the trigger.

4- With each pull of the trigger, one shot will occur.


5- If you want stop shooting, decock and unload your pistol confirming the general rules.

**ATTENTION:** Always keep your finger off the trigger until ready to shoot.

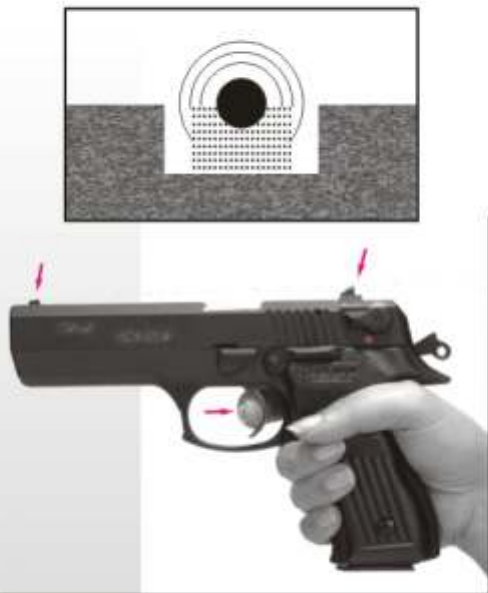

Picture: 5

## ADJUSTING THE SIGHTS

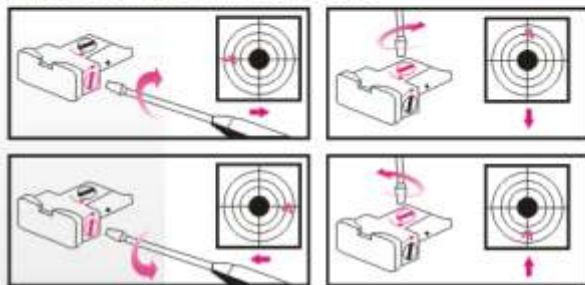

To raise the rear sight, turn the elevation adjusting screw counterclockwise. To lower the rear sight turn the screw clockwise.

The rear sight can also be adjusted for windage. Turn the windage adjusting screw clockwise to move the notch to right side, and counter-clockwise to move the notch to left side.

\* This function is for the products with adjustable sights

**ATTENTION:** Always make sure that the chamber is empty before adjusting the sights

## TRIGGER BLOCK SAFETY

To place the safety position, push the lever down so that it covers the red dot. The trigger can not be moved rearward when you lock the sear. As a result, the hammer is also blocked.(Pic-6)



Picture: 6

## FIRING PIN SAFETY

Firing pin safety is only disengaged when the trigger is pulled. If, after a fall, the hammer was released, then the firing pin would not be activated.(Pic-7)



Picture: 7

**ATTENTION:** Always make sure that the muzzle is pointed in a safe direction, keep away your fingers from the trigger.

## UNLOADING THE MAGAZINE

1- Hold the pistol with your right hand and press the magazine release button with your thumb. Release the magazine with the other hand.(Pic-8)



Picture: 8

2- After releasing the magazine you should control the chamber. Retract the slide to its rearmost position. Clear the chamber if still remains cartridge. Always check the chamber and the interior area of the receiver and the magazine-well to be certain there are no cartridges present. (Pic-9)



Picture: 9

**Important! Please make sure the chamber is empty before disassembling the pistol**

## **SECTION 3      DISASSEMBLING THE PISTOL**

### **RELEASING THE MAGAZINE**

1- Hold the pistol with your right hand, to remove the magazine press the magazine release button with your thumb. Release the magazine. (Pic-10)



Picture: 10

2- After removing the magazine, visually check whether a cartridge is in the chamber or not. Make sure the gun is pointed in a safe direction. (Pic-11)



Picture: 11

**ATTENTION:** Always keep your finger off the trigger until ready to shoot.

## DISASSEMBLING THE SLIDE

3- Hold the pistol with your right hand. Push the slide assembly back lightly with your left hand when the safety spring is ON. Slide stop is turned down 90 degrees by the right forefinger of the left hand. (Pic-12)



Picture: 12

4- Pull the slide assembly forward and off the receiver. (Pic-13)



Picture: 13

## DISASSEMBLING THE BARREL

5- Hold the slide at the top with your left hand. Retract the recoil spring and guide then remove the recoil spring and guide as a whole. (Pic-14)

ATTENTION: The recoil spring is under tension! During removal use care to control the recoil spring and/or recoil spring tube.)



Picture: 14


6- Remove the barrel from the slide. (Pic-15)



Picture: 15

**ATTENTION:** Please contact a gunsmith for assembling/disassembling other parts.

## DISASSEMBLING THE PARTS FOR CLEANING AND UPKEEPING

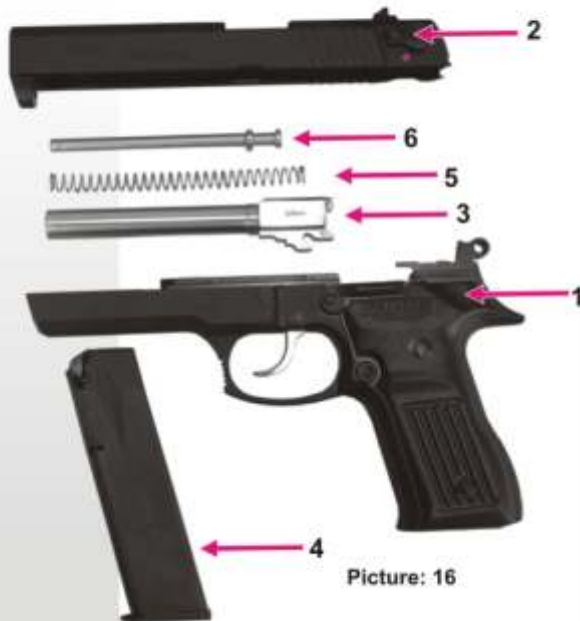

Picture: 16

**1- Frame**

**2- Slide assembly**

**3- Barrel**

**4- Magazine**

**5- Recoil spring**

**6- Recoil spring guide**

## SECTION 4 CARE

### CLEANING AND MAINTENANCE

For the reliable functioning and durability of the pistol, after each shooting or whenever the pistol has been exposed to humidity, dust or other adverse conditions, make its upkeep once a month following the proceedings below.

Requirements for upkeep: brush, oil, cleaning rod, cloth. (Pic-17)



Picture: 17

### CARE

- 1- Disassemble the pistol. (Section 3)
- 2- Using an oiled brush, scrub inside of the slide and chambers. (Pic-18)



Picture: 18

**ATTENTION:** Granuled solvents in cleaning can damage the gun's bluing and finish.

3- Swab the interior of the slide with the cloth to remove the excess accumulations of oil.

4-With the oiled brush, run through the barrel several times. (Pic-19)

5-Wipe dry inside of the barrel with the cleaning rod and cloth. (Pic-20)




Picture: 19

6-Check all parts cleaned or not, if still remains dirt, repeat the steps.(Pic-19)

7- Wipe all parts and surfaces with a cloth that is lightly oiled.

8- Before firing remove all oil from the barrel with cleaning rod and cloth.(Pic-20)

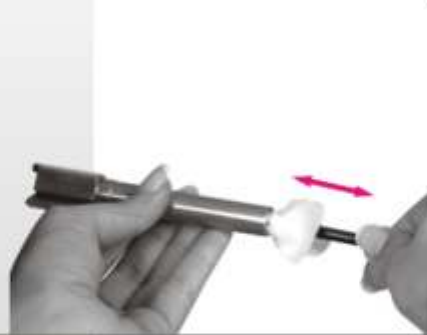

Picture: 20

**ATTENTION:** Never use alcohol or over-the-counter, prescription or other drugs before or while shooting.

## REASSEMBLING THE GUN

To reassemble the pistol, simply reverse the same procedures. You should pay attention to the items mentioned below.

1- The barrel is placed in the slide assembly. (see Pic-15) Install the recoil spring tube and recoil spring.(see Pic-14)

2- Place the slide, as safety latch is ON, on the receiver. (See Pic-21)

3- After placing the slide, turn the slide stop 90 degrees counterclockwise.

4-The pistol is set after inserting the magazine. (See Pic-3)

5- Make sure that the pistol is in safety position. (See Pic-6)



Picture: 21

## SECTION 5

## TECHNICAL SPECIFICATIONS

|                            | <b>ZIGANA K</b>                                      | <b>ZIGANA T</b>                                      | <b>ZIGANA F</b>                                 | <b>ZIGANA C45</b>                               |
|----------------------------|------------------------------------------------------|------------------------------------------------------|-------------------------------------------------|-------------------------------------------------|
| Caliber                    | 9x19 mm.                                             | 9x19 mm.                                             | 9x19 mm.                                        | 45 cal.                                         |
| Magazine Capacity          | 15                                                   | 15                                                   | 15                                              | 10                                              |
| Safety System              | Pin Safety,<br>Hammer Safety,<br>Safety Latch        | Pin Safety,<br>Hammer Safety,<br>Safety Latch        | Pin Safety,<br>Hammer Safety,<br>Safety Latch   | Pin Safety,<br>Hammer Safety,<br>Safety Latch   |
| Operating System           | Single Recoil System,<br>Semi - Automatic            | Single Recoil System,<br>Semi - Automatic            | Single Recoil System,<br>Semi - Automatic       | Single Recoil System,<br>Semi - Automatic       |
| Aim Order                  | Stable Square<br>Front Sight,<br>Half "U" Rear Sight | Stable Square<br>Front Sight,<br>Half "U" Rear Sight | Square Front<br>Sight, Adjustable<br>Rear Sight | Square Front<br>Sight, Adjustable<br>Rear Sight |
| Weight<br>(Empty magazine) | 935 gr.                                              | 980 gr.                                              | 960 gr.                                         | 1000 gr.                                        |
| Length                     | 199 mm.                                              | 220 mm.                                              | 206 mm.                                         | 208 mm.                                         |
| Height                     | 141 mm.                                              | 141 mm.                                              | 142 mm.                                         | 143,5 mm.                                       |
| Width                      | 34 mm.                                               | 34 mm.                                               | 37 mm.                                          | 36,5 mm.                                        |
| Barrel Length              | 108 mm.                                              | 130 mm.                                              | 117 mm.                                         | 119 mm.                                         |

**TİSAŞ has the security and Production License from Ministry of National Defence since 1998 and the manufacturing system at TİSAŞ confirms the requirements of the AQAP 120 and ISO 9001-2000 Quality Systems.**




*We're proud of our pistols used by the Turkish Armed Forces.*

## PARTS LIST

| NO | PARTS DESCRIPTION          | CODE NO   | NO | PARTS DESCRIPTION       | CODE NO  |
|----|----------------------------|-----------|----|-------------------------|----------|
| 1  | MAGAZINE CATCH LOCK        | ZT-1      | 26 | BARREL SUPPORT          | ZT-30    |
| 2  | MAGAZINE CATCH LOCK SPRING | ZT-1.01   | 27 | BARREL                  | ZT-31    |
| 3  | MAIN SPRING GUIDE          | ZT-2      | 28 | SLIDE                   | ZT-32    |
| 4  | MAIN SPRING                | ZT-2.01   | 29 | DISCONNECTOR            | ZT-33    |
| 5  | MAIN SPRING GUIDE PIN      | ZT-2.02   | 30 | DISCONNECTOR SPRING     | ZT-33.01 |
| 6  | FRONT SIGHT                | ZT-3      | 31 | GRIP RIGHT              | ZT-35    |
| 7  | SEAR                       | ZT-10     | 32 | GRIP LEFT               | ZT-35a   |
| 8  | SEAR SPRING                | ZT-10.01  | 33 | MAGAZINE                | ZT-503   |
| 9  | SEAR PIN                   | ZT-10.02  | 34 | FRAME                   | ZT-40    |
| 10 | SEAR SPRING PIN            | ZT-10.04  | 35 | TRIGGER                 | ZT-42    |
| 11 | HAMMER                     | ZT-701    | 36 | TRIGGER SPRING          | ZT-42.01 |
| 12 | HAMMER PIN                 | ZT-11.01  | 37 | TRIGGER PIN             | ZT-42.03 |
| 13 | SIGHT                      | ZT-16     | 38 | GRIP BUSHING            | ZT-43    |
| 14 | SAFETY LATCH RIGHT         | ZT-18     | 39 | GRIP PLATE SCREW        | ZT-43a   |
| 15 | SAFETY SPRING RIGHT&LEFT   | ZT-18.01  | 40 | EXTRACTOR               | ZT-47    |
| 16 | SAFETY SPRING BALL RIGHT   | ZT-18.02  | 41 | EXTRACTOR SPRING        | ZT-47.01 |
| 17 | SAFETY LATCH LEFT          | ZT-18a    | 42 | EXTRACTOR PIN           | ZT-47.02 |
| 18 | SAFETY SPRING BALL LEFT    | ZT-18a.01 | 43 | RECOIL SPRING GUIDE     | ZT-55    |
| 19 | FIRING PIN                 | ZT-21     | 44 | RECOIL SPRING           | ZT-55.01 |
| 20 | SMALL PIN                  | ZT-21a    | 45 | SLIDE STOP              | ZT-56    |
| 21 | FIRING PIN SPRING          | ZT-21.01  | 46 | SLIDE STOP SPRING       | ZT-56.01 |
| 22 | EJECTOR                    | ZT-24     | 47 | SLIDE STOP PIN          | ZT-56.02 |
| 23 | EJECTOR PIN                | ZT-24.01  | 48 | PIN SAFETY BLOCK        | ZT-67    |
| 24 | SEAR DISCONNECTOR          | ZT-25     | 49 | PIN SAFETY BLOCK SPRING | ZT-67.01 |
| 25 | TAKE DOWN LEVER            | ZT-28     | 50 | PIN SAFETY BLOCK LATCH  | ZT-70    |

# EXPLODED VIEW OF

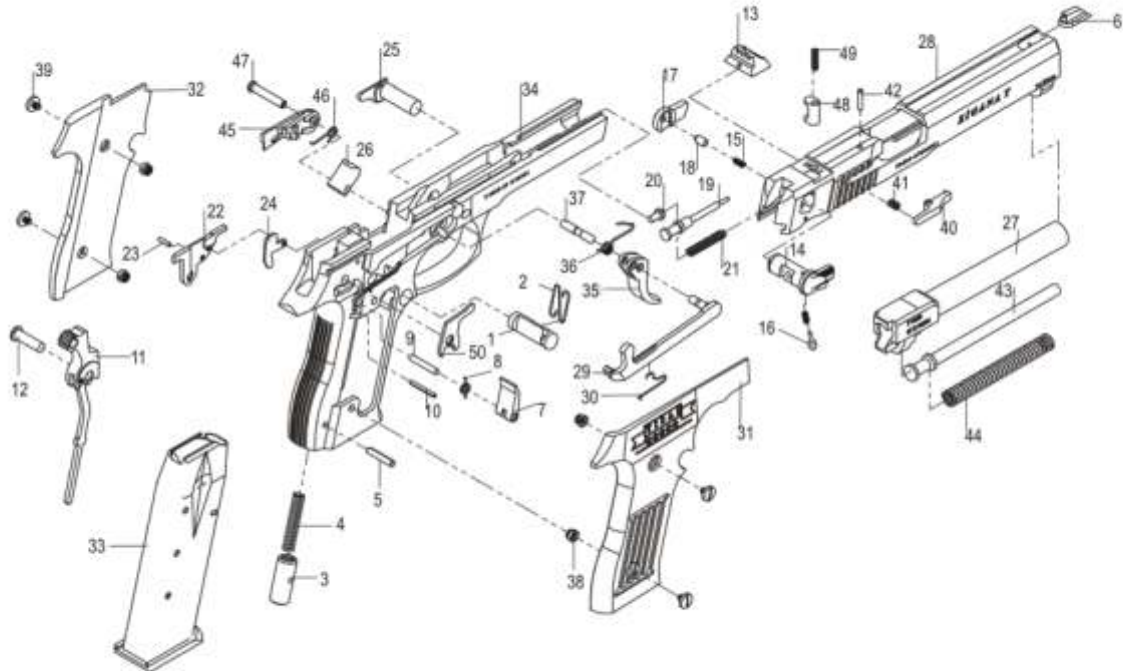

## PROBLEMS ON FIRING

Malfunctions or defects at firing of the firearms are caused by wrong maintenance, damaged magazine or wrong type of ammunition.

| PROBLEMS              | POSSIBLE REASONS                             | SOLUTION SUGGESTION                                                                                                                                                                           |
|-----------------------|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Firearm is not firing | Hammer does not work                         | Be sure that the safety latch is on                                                                                                                                                           |
|                       | Hammer works but not fire, broken firing pin | Take the firearm to a gunsmith                                                                                                                                                                |
|                       | Dirty sledge surface                         | Unload the firearm and clean it                                                                                                                                                               |
|                       | Wrong type of cartridge                      | Eject the cartridge by pulling the slide back, continue to fire with the next cartridge                                                                                                       |
| Feeding problem       | Insufficient cocking                         | Repeat the operation by pulling the slide back                                                                                                                                                |
|                       | Insufficient spring pressure                 | Push the magazine until it's held by the magazine catch or take the firearm to a gunsmith                                                                                                     |
|                       | Deformed magazine lip                        | Change the magazine                                                                                                                                                                           |
|                       | Deformed magazine spring                     | Change the magazine                                                                                                                                                                           |
| Ejection failures     | Deformed carrier spring                      | Change the carrier spring                                                                                                                                                                     |
|                       | Failure in extracting jammed at the cover    | Remove the magazine from the firearm. Pull the slide back, remove the jammed cartridge with a wooden tool and clean the chamber. If the problem repeats again, take the firearm to a gunsmith |
|                       | Broken extractor                             | Take the firearm to a gunsmith                                                                                                                                                                |
|                       | Wrong type of or damaged ammunition          | Change the ammunition                                                                                                                                                                         |
|                       | Deformed or broken extractor spring          | Take the firearm to a gunsmith                                                                                                                                                                |
|                       | Deformed or broken ejector                   | Take the firearm to a gunsmith                                                                                                                                                                |

## **GUARANTEE CONDITIONS**

- 1- The guarantee continues one year and started from the delivery of the gun.**
- 2- If there is a failure with the gun in the guarantee period; contact the authorized service by the seller.**
- 3- If there is a failure with the gun by the material, workmanship or assembling faults in the guarantee period; the gun is repaired as soon as possible.**
- 4- Failures caused by the usage faults are not in the guarantee range. The usage faults are determined by the experts of our company.**
- 5- For more information contact us.**



# TİSAŞ TRABZON GUN INDUSTRY CORP.

**FACTORY**  
**ORGANİZE SANAYİ BÖLGESİ**  
**61900 ARSİN - TRABZON - TÜRKİYE**  
**Phone: +90 462 711 10 80**  
**Fax: +90 462 711 17 87**

**DEPARTMENT:**  
**DE-GOL CAD. 13/1**  
**TANDOĞAN- ANKARA - TÜRKİYE**  
**Phone : +90 312 213 75 09**  
**Fax: +90 312 213 78 06**  
**+90 312 213 85 70**

**Web : [www.trabzonsilah.com](http://www.trabzonsilah.com)**  
**E-mail: [sales@trabzonsilah.com](mailto:sales@trabzonsilah.com)**



**AQAP 120**

